

HUXCleaner™

In-Adaptor Ferrule Cleaner



HUXCleaner™ is Pen Type In-Adaptor Ferrule Cleaner and it is no need to open the frame for ferrule cleaning inside of Adaptors.

In the Fiber Optic Communication, the ferrule is used as final interconnect parts which is transfer light signal through optical fiber. The ferrule cleaning is the most important basis in the interconnects to prevent any signal error. Specially the back reflection specification which is issued more tightly at these days depend on any dust or oil, etc.

HUXCleaner™ is designed for Female side cleaning.


Special Features

- Pen Type : First in the World (Patent under Application No.0008107)
- About 500 cleaning by 1 HUXCleaner
- No need open the Frame for ferrule cleaning inside of Adaptors
- Used advanced cleaning fiber which has better suction of water and oil than present swabs.
- Easy and Simple and Pocket Portable
- Window for showing remain cleaning fibers
- For 1.25mm (LC, MU) and 2.5mm (SC, FC, ST) ferrule type Cleaning is available
- Minimum 1/5 Cost Saving than Swab.

First in the World

HUXCleaner™

In-Adaptor Ferrule Cleaner

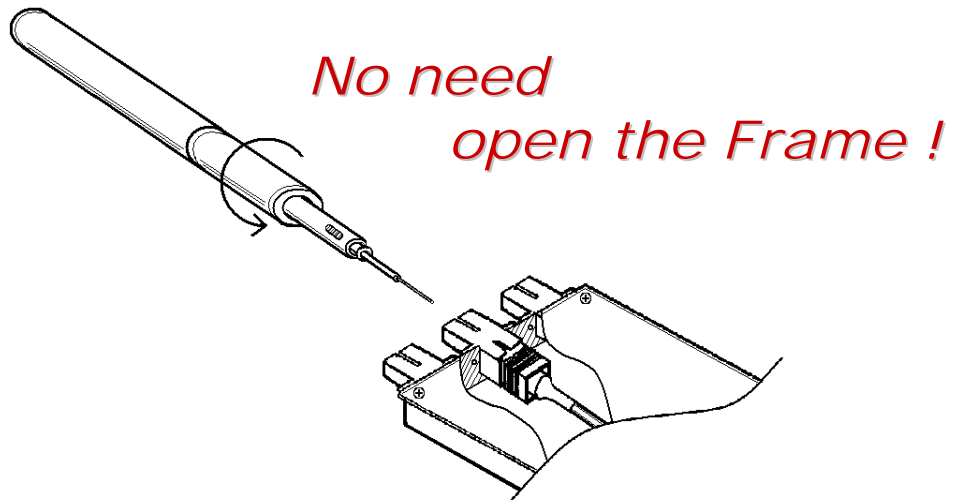

Specification

Housing Material	Plastic or Metal
Cleaning Ferule	Metal
Cleaning Fiber	Special Yarn
Length	145mm
Packing	Individual
Cleans per unit	500 times
Refill	None

- Note: 1. Do not use it for other purpose than Ferrule Cleaning.
 2. The cleaning performance may differ from the environment and the contamination types.
 3. Use it by the recommended cleaning method if possible.

How to Clean



Insert Cleaning Tip inside adaptor :

HUXCleaner-1.25 is precisely designed for the depth of LC, MU and HUXCleaner-2.5 is for SC, FC, ST type adaptors each.

Turn Rotator :

Turn the Rotator just 1~2 click clockwise. For better cleaning, rotate body around 2~3 rotations before turn Rotator.

Remove and Cap :

If not in use, do not remove the Cap to prevent any contamination.

† More question to sales@thefibers.com or call +82-11-722-9285